Smith&Wesson®

Owner's Manual

Model 3 Schofield

- 2000 -

Smith&Wesson Performance Center

Read the instructions and warnings in this manual CAREFULLY BEFORE using this firearm.

2100 Roosevelt Avenue • Springfield, MA 01104
1-800-331-0852 • Fax: 413-747-3317
www.smith-wesson.com

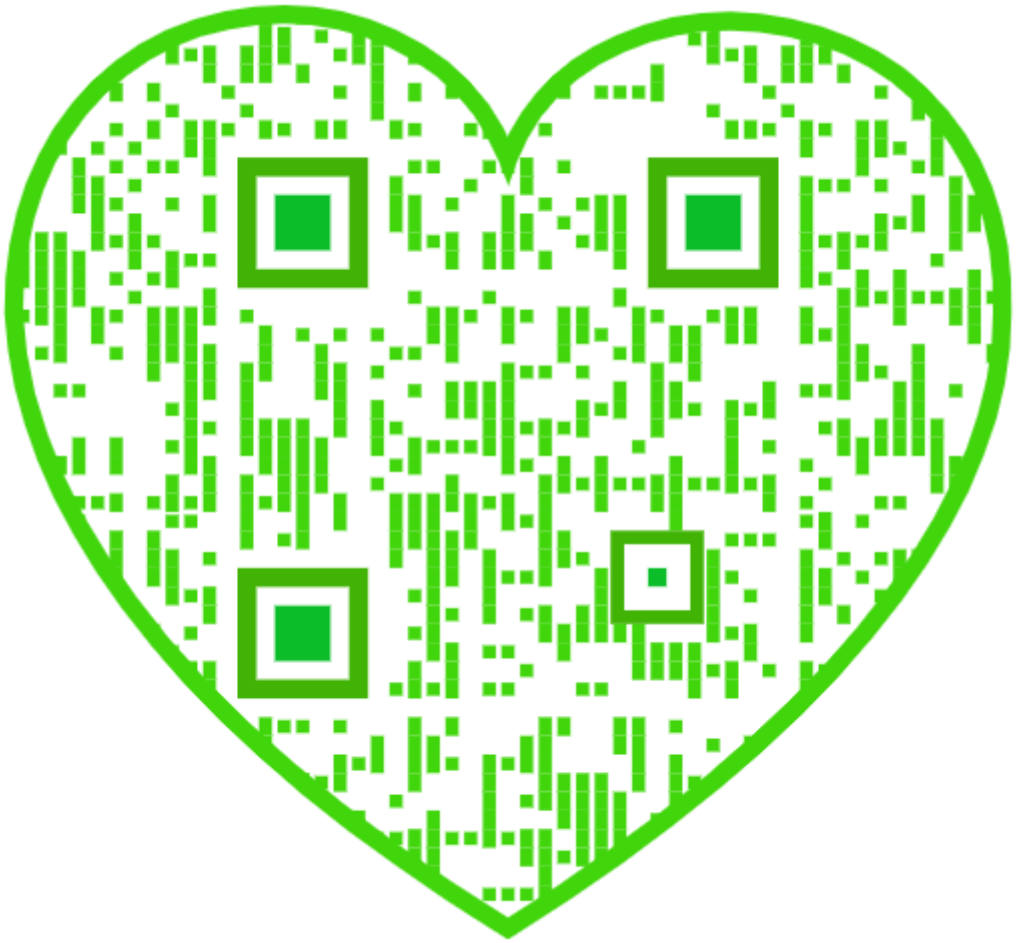

Safety Manual - Schofield2 3/16/01 9:15 AM Page 2

READ THESE INSTRUCTIONS AND WARNINGS CAREFULLY. BE SURE YOU UNDERSTAND THESE INSTRUCTIONS AND WARNINGS BEFORE USING THIS FIREARM.

This SAFETY, INSTRUCTION and PARTS MANUAL should always accompany this firearm and be transferred with it upon change of ownership or presented to another person. A copy of the SAFETY, INSTRUCTION, & PARTS MANUAL is available FREE upon request from:

SMITH & WESSON
CUSTOMER SUPPORT CENTER
2100 ROOSEVELT AVENUE
SPRINGFIELD, MA 01104
TEL.: 1-800-331-0852
E-mail: qa@smith-wesson.com

INDEX

SAFETY 4

BASIC FIREARMS SAFETY RULES 5-6

SAFE STORAGE & TRANSPORTATION 7-8

NOMENCLATURE 8-9

PREPARATION FOR FIRING 9-10

AMMUNITION 10-12

SERIAL NUMBER IDENTIFICATION 13

INSPECTING YOUR MODEL 3 SCHOFIELD .14-15

LOADING 16-17

FIRING 18-20

CLEARING MISFIRES 20

UNLOADING 21

CLEANING & MAINTENANCE 22

SERVICE, SHIPPING & PARTS 23-24

WARRANTY 25

EXTENDED SERVICE POLICY 26

WARNINGS 27

SAFETY

SAFETY IS YOUR NUMBER ONE RESPONSIBILITY!!!!

WARNING: YOU MUST FOLLOW ALL OF THESE SAFETY RULES TO ENSURE THE SAFE USE OF YOUR FIREARM

- **Safe gun handling is YOUR personal responsibility at all times.** Firearms are dangerous and can cause serious injury and death if they are misused or used inappropriately. Safety must be the prime consideration of anyone who owns or handles firearms.
- **You are responsible for the firearm at all times.** In owning a firearm, you must undertake full-time responsibility for your firearm's safety and security. You must protect yourself and all others against injury or death from misuse of the firearm.
- **Safe storage is your responsibility.** In particular, you must secure firearms safely from children and unauthorized users. A lock has been provided for your use with this firearm. A lock is not a substitute for safe and secure storage as defined in the "Safe Storage and Transportation" section of this manual.
- **Accidents are the result of violating the rules of safe gun handling and common sense.**
- **For your safety and the safety of others, never rely on mechanical features alone.** Only your safe gun-handling habits will ensure the safe use of your firearm. This is your responsibility.
- **Never keep ammunition in the same location as the handgun.** Store in a separate and secure place.
- **READ and UNDERSTAND these instructions before using your firearm.**

BASIC FIREARM SAFETY RULES

At home, in the field, at the range, or anywhere, the first concern of every firearm owner should be safety. Apply the following safety rules in every situation, with any kind of firearm.

WARNING!

THE FAILURE TO FOLLOW THESE BASIC FIREARM SAFETY RULES MAY RESULT IN AN UNINTENDED DISCHARGE WHICH COULD CAUSE SERIOUS PERSONAL INJURY OR DEATH.

- **BEFORE HANDLING ANY FIREARM, UNDERSTAND ITS OPERATION.** Not all firearms are the same. Familiarize yourself with the mechanical features of any firearm you intend to use. If you feel uncertain about any operational aspects of your handgun, please contact Smith & Wesson at 1-800-331-0852 before proceeding with its operation.
- **ALWAYS SAFELY STORE AND SECURE YOUR FIREARM.** Safe and secure storage of your firearm is one of the most important responsibilities of firearms ownership. It is a full-time responsibility. You must always secure your firearm and ammunition separately so that they are not accessible to children or other unauthorized persons. (See Safe Storage Instructions on pages 8-9.)
- **ALWAYS TREAT EVERY FIREARM AS IF IT WERE LOADED AND WOULD FIRE IF THE TRIGGER IS PULLED.** Do not take anyone's word that the firearm is unloaded – always check for yourself. Never pass your firearm to another person until the cylinder or action is open and you visually check that it is unloaded. Keep your firearm unloaded and safely stored when not in use.
- **ALWAYS KEEP YOUR FIREARM POINTED IN A SAFE DIRECTION.** Never point a firearm at anyone or anything you do not intend to shoot whether or not it is loaded. This is particularly important when loading, unloading, or field stripping the gun. ALWAYS control the direction of the firearm.
- **NEVER PLACE YOUR FINGER INSIDE THE TRIGGER GUARD UNLESS YOU INTEND TO FIRE.** Your firearm cannot fire unless the trigger is pulled. Ensure that other objects do not actuate the trigger.
- **ALWAYS BE SURE OF YOUR TARGET AND WHAT IS BEYOND IT.** Always be sure of where the bullet will strike and shoot only where there is a safe backstop free of obstructions, water or other surfaces which can cause ricochets. Do not fire into the sky.

BASIC FIREARM SAFETY RULES CONT'D.

ADDITIONAL IMPORTANT SAFETY RULES

- Never carry or store a firearm with the hammer or striker in the cocked position.
- Do not allow a firearm to be used by individuals who have not read these basic firearms safety rules and do not understand its safe operation and the rules of safe gun-handling.
- Be sure all accessories, such as holsters and grips, are compatible with the firearm and that the accessories do not interfere with safe operation.
- Use the correct ammunition for your particular firearm as indicated by the marking on the barrel. Never use non-standard, reloaded, or "handloaded" ammunition which has not been subjected to internal ballistic pressure testing.
- Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead and other substances known to cause birth defects, reproductive harm, and other serious physical injury. Review the warnings and labels for all ammunition and cleaning products carefully. Have adequate ventilation at all times. Wash hands thoroughly after exposure.
- Never use alcohol or drugs before or while shooting. Do not use your firearm if you are on any medication which impairs, even slightly, your mental or physical ability.
- Wear eye and hearing protection appropriate for firearm use every time you discharge your firearm. Make sure others in the vicinity of where you will be shooting do so as well.
- Do not allow any alteration or replacement of parts in your Smith & Wesson firearm unless performed by a qualified gunsmith using genuine Smith & Wesson parts. If you do otherwise, improper functioning of your firearm may occur and serious injury may result.
- Never cross obstacles such as fences or streams with a loaded firearm.
- Firearm safety training is available. Contact your dealer for availability.
- Appropriate use for your firearm means using your firearm for legal purposes. For example - target shooting and lawful resistance of deadly criminal force.
- These are basic firearms safety rules. There are other common sense safety rules that should be followed at all times under the circumstances then presented.
  SAFE USE OF A FIREARM IS YOUR PERSONAL RESPONSIBILITY AND THE FAILURE TO FOLLOW ALL OF THESE BASIC SAFETY RULES MAY RESULT IN SEVERE PERSONAL INJURY OR DEATH.

SAFE STORAGE & TRANSPORTATION

WARNING: SAFE AND SECURE STORAGE OF YOUR FIREARM IS ONE OF THE MOST IMPORTANT RULES OF FIREARM SAFETY. YOUR FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS INJURY OR DEATH.

- **You must always secure your firearm and ammunition separately so that they are not accessible to children or other unauthorized persons.**
- **Safe and secure storage and transportation of your firearm are your responsibility. It is a full-time responsibility.**
- **ALWAYS STORE YOUR FIREARM UNLOADED.** Your firearm and ammunition should be stored separately in places and in a manner inaccessible to children and unauthorized persons.
- **SMITH & WESSON HAS PROVIDED A LOCK FOR USE WITH YOUR FIREARM.** There are also a variety of other locks and safe storage containers available in the marketplace which may be appropriate for your particular needs. Consult your local gunshop, hardware store, or local police department for guidance on the variety of other safe storage devices or practices which may be appropriate for your particular needs. By purchasing this firearm you have taken on the responsibility of safely securing the firearm at all times and preventing its unauthorized use. It is your personal responsibility to select and use whatever devices or practices that will enable you to safely secure your firearm at all times.

DO NOT USE A LOCK ON A LOADED HANDGUN!

Only you can determine what devices or practices are appropriate for the safe storage of your firearm and your ammunition.

- **NEVER ASSUME THAT A "HIDING" PLACE IS A SECURE STORAGE METHOD.** Others may be aware of your storage location or come upon it by chance. It is your personal responsibility to use common sense when storing and securing your firearm and ammunition and to always make sure that it is not accessible to children or other unauthorized persons.
- **FOLLOW THE LAW!!** You must be familiar with all local, state, and federal laws regarding the safe storage and transportation of your firearm. Failure to know and follow the law may result in unauthorized access or use of your firearm by another. Obey all laws relating to the storage and transportation of firearms.
- **NEVER TRANSPORT A LOADED FIREARM.** When transporting your firearm, be sure it is unloaded and that the cylinder or action is open.

SAFE STORAGE & TRANSPORTATION CONT'D.

- Your local police department or gunshop will furnish you with available information on storing and/or transporting a firearm legally.
- **YOUR FIREARM IS YOUR RESPONSIBILITY.** Protect your firearm from theft or misuse by untrained or unqualified individuals.

MAINTENANCE BEFORE STORAGE

When storing, do not encase your firearm in anything that will attract or hold moisture, for example, leather or heavy cloth. Also, do not store guns with a plug inserted in the barrel for this can be a contributing factor to moisture accumulation. If your firearm is to be stored for an extended period, the bore, chambers and internal working mechanism should be oiled with acid-free lubricating oil or preservative, and the external working mechanisms, frame, cylinder and barrel should be coated with an anti-rust oil. Before using your firearm again, be sure to clean it. Every time you clean your firearm, check it for signs of wear. If wear is noted, do not use the firearm. Return it to Smith & Wesson for service or have it checked by a qualified gunsmith.

MAINTENANCE BEFORE USE

Before using your firearm, it should be cleaned. (See Cleaning Instructions at page 22.) Your firearm has been treated with either a preservative or oil to protect it against corrosion. Before using it, all excess oil should be wiped from the bore, chambers (charge holes), and exposed areas using a clean swab or patch. A light coat of high quality gun oil should be applied to the outside surfaces and mechanism. Care should be taken not to oil the mechanism to the degree that dust and lint may be trapped by the oil.

NOMENCLATURE

Smith & Wesson handguns are reliable and safe to use when the basic firearm safety rules are followed. There are a number of internal safety mechanisms within the lockwork of the handgun which ensure that the firearm will not discharge unless the trigger of the handgun is pulled. That is one reason why it is important to never modify or alter your firearm. Before you use your handgun, you should be fully familiar with its operation.

Here is a list of basic firearms terminology.

AMMUNITION - CENTERFIRE - Ammunition which contains the primer in the center of the base of the case. Among the most common centerfire handgun cartridges are the .32, .38 Special, .380, 9mm, .357 Magnum®, .40 S&W®, .45 ACP and the .44 Magnum®.

AMMUNITION - RIMFIRE - Ammunition which contains the primer material in the rim. Among the most common rimfire handgun cartridges are the .22 Long, .22 Short, .22 LR, .22CB, .22BB, and .22 Magnum.

CALIBER - The diameter of a bullet, designated in hundredths or thousandths of an inch (.357) or in millimeters (9mm).

DECOCK - The process by which the hammer or striker is safely lowered.

NOMENCLATURE CONT'D.

DOUBLE ACTION - A firing action where the hammer or striker is drawn back, released, and the gun fired by a single pull of the trigger.

DOUBLE ACTION ONLY - A firearm designed so that it can only be fired in double action.

PISTOL - A handgun that contains the cartridges in a magazine.

REVOLVER - A handgun that contains the cartridges in a cylinder that revolves at the rear of the barrel.

SINGLE ACTION - A firing action where the hammer or striker is released from the cocked position by pulling the trigger.

The operation of your handgun will be explained in greater detail in the pages that follow, as well as a greater description of key component parts.

PREPARATION FOR FIRING

ALWAYS WEAR EYE AND EAR PROTECTION WHICH IS SPECIFIED FOR FIREARM USE.

- Failure to wear adequate and proper ear protection on even one occasion can potentially permanently damage your hearing. Make sure others who are nearby are wearing ear protection as well.
- Always wear safety glasses, whether indoors or out. Safety glasses protect your eyes from the firing flash and particles associated with the discharge of ammunition.
- **DO NOT SHOOT AT HARD SURFACES, WATER OR UP INTO THE SKY.** Always select a place to shoot that has a safe backstop, is free from obstructions and water surfaces which cause ricochets.
- Always be aware of other people so that persons cannot accidentally walk into the line of fire.
- Position the shooter and all others so that they are not within an area where they may be struck by particle-spitting from a revolver or by ejected cases from other types of firearms.
- Keep fingers and other parts of your body away from the muzzle and away from the gap between the revolver barrel and cylinder, and away from the pistol slide and ejection port.
- Be alert and always follow the safety instruction of the range officer.

PREPARATION FOR FIRING CONT'D.

- Be sure that all cylinders and actions of firearms are open, that chambers are clear of cartridges, magazines are removed, and that firearms are pointing in a safe direction before anyone is allowed in front of the firing position.

- Be alert at all times. Never shoot if you are tired, cold or impaired in any way.

- Treat your firearm as if it were loaded at all times.

AMMUNITION

A. GENERAL PRINCIPLES

- A firearm and ammunition are a system and must work together. Their performance is closely related. There are different types of ammunition for different types of firearms. Your firearm has been designed for ammunition of a specific type and a specific caliber. It is important to select the proper ammunition for your firearm.

!! WARNING !!

- **Never use ammunition not specifically designated for use in your firearm. Failure to use the correct type or caliber of ammunition may cause the firearm to jam, fail to fire or even generate excessive pressure which can damage or even rupture your firearm, causing personal injury or property damage.**

- You are responsible for selecting ammunition that meets industry standards and is appropriate in type and caliber for this firearm.

- Locate the caliber designation printed on the handgun. This information indicates the ammunition caliber that should be used in this firearm. (See figure #1)

B. HANDLOADED OR RELOADED AMMUNITION

!! WARNING !!

- **Never use non-standard, reloaded or "handloaded" ammunition which has not been subjected to internal ballistic pressure testing.** Reloaded or handloaded ammunition, may have many manufacturing and quality variables (such as the type and amount of gun powder).

- **Any ammunition that is improperly manufactured, even in the slightest degree, may fail to fire or may generate excessive internal pressures which can damage or even rupture the firearm, causing personal injury to the shooter or those in the immediate vicinity.**

FIGURE 1

AMMUNITION CONT'D.

- Use only commercially manufactured ammunition with internal ballistic pressures which are in strict accordance with the specifications of the Sporting Arms and Ammunition Manufacturers' Institute (SAAMI).
- Be certain all ammunition you use complies with the SAAMI specifications. If you are uncertain, contact your ammunition supplier for verification.

C. MISFIRES

- If your firearm fails to fire when the trigger is pulled (misfires), keep the firearm pointed in a safe direction, remove your finger from the trigger, and wait 10 seconds. Only after you have completed all of the above steps, remove the magazine or open the cylinder and remove the cartridge from the chamber and dispose of it properly. Keep your firearm pointed in a safe direction at all times.
- If you have heard an unusual sound or felt an unusual recoil on firing, stop firing, wait 10 seconds, unload the firearm, and examine the barrel bore for obstructions.
- Make sure your barrel is clear and free of obstructions. If you see an obstruction, return your firearm to Smith & Wesson or take it to a qualified gunsmith. Never fire a firearm with an obstructed barrel.

D. AMMUNITION SPECIFICS

- Use only ammunition specifically recommended by Smith & Wesson for your firearm.
- Never mix ammunition.
- Never use a cartridge not specifically designated for use in your firearm. Pressure from the wrong type of ammunition may be beyond the capability of your firearm to withstand and may damage or even rupture your firearm.
- Whenever rimless pistol cartridges are used in the cylinder of a Smith & Wesson revolver, (except M547) full or half-moon clips MUST be used to both position and extract such cartridges. Failure to use ammunition clips with rimless cartridges may result in malfunction of the revolver.
- Additional ammunition calibers can be fired from the following list of select calibers.

Caliber on Barrel	Can also Fire
.45 Colt	.45 Schofield, .45 S&W
.45 S&W	.45 Schofield
.44 Magnum	.44 Special
.357 Magnum	.38 Special, .38 Special +P
.22LR	.22L, .22 Short, .22CB, .22BB
10mm	.40 S&W (in revolvers only)

- In some cases, a round of ammunition not specified on your handgun may fit into the chamber or cylinder. Firing ammunition not specified on your handgun may cause it to rupture and cause serious injury or death.

AMMUNITION CONT'D.

E. AMMUNITION WARNINGS

- "Plus-P" (+P) ammunition generates pressures in excess of the pressures associated with standard ammunition. Such pressures may affect the wear characteristics or exceed the margin of safety built into some revolvers and could therefore be DANGEROUS.

- "Plus-P" ammunition should not be used in medium (K frame) revolvers manufactured prior to 1958. Such pre-1958 medium (K-frame) revolvers can be identified by the absence of a model number stamped inside the yoke cut of the frame. (i.e., the area of the frame exposed when the cylinder is in the open position).

- "Plus-P-Plus (+P+) marking on the ammunition merely designates that it exceeds established industry standards, but the designation does not represent defined pressure limits and therefore such ammunition may vary significantly as to the pressures generated.

- "Plus-P-Plus (+P+) ammunition is not recommended for use in Smith & Wesson firearms.

- In the Model 940 revolver, some brands of 9mm parabellum ammunition may cause difficulty in extracting spent cartridge cases from the cylinder. If this situation occurs, thoroughly clean the cylinder charge holes with solvent. If this condition persists, we recommend changing to another brand of 9mm parabellum ammunition.

- Smith & Wesson has found wide variations in primer sensitivity between some brands and types of .22LR ammunition. Smith & Wesson recommends that before you put your .22LR handgun into regular use, that you fire several boxes of your choice of ammunition through it to determine reliability of ignition. If "failure to fire" occurs, try different types of brands of .22LR ammunition until a reliable loading is found.

!! WARNING !!

DO NOT USE ROUNDS LOADED WITH BLACK POWDER. DUE TO THE CORROSIVE NATURE OF BLACK POWDER, IT'S USE IN THIS FIREARM WILL VOID ALL WARRANTIES.

- The Model 3 Schofield of 2000 is designed to use modern factory loaded smokeless powder ammunition loaded to SAAMI specifications.

SERIAL NUMBER IDENTIFICATION

The serial number appears here.

FIGURE 2

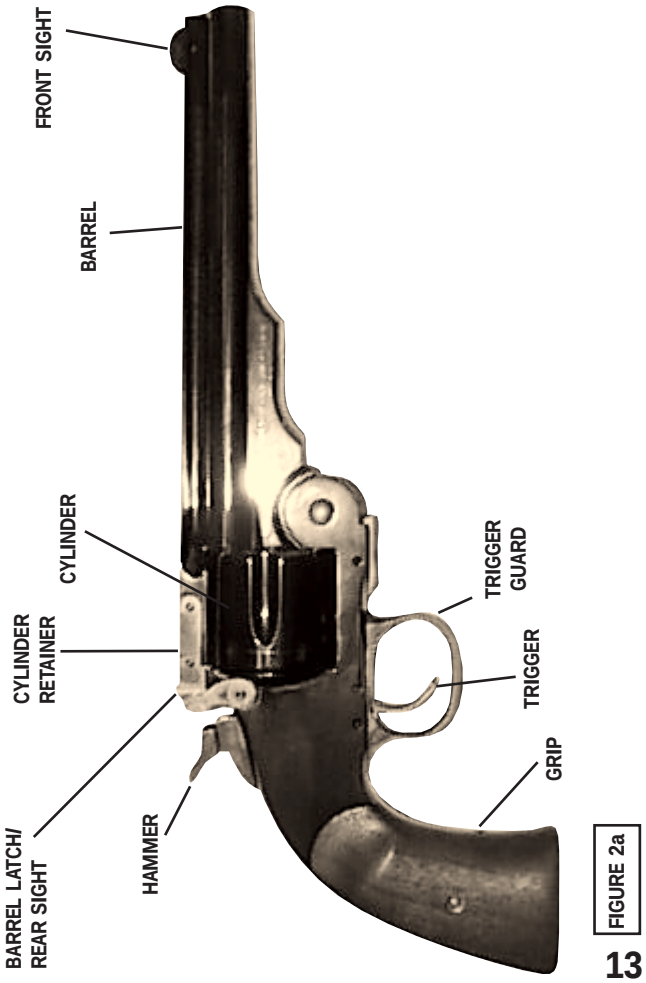

FIGURE 2a

INSPECTING YOUR MODEL 3 SCHOFIELD

When you inspect your revolver, you must first check to ensure that it is unloaded. Do this with your finger off the trigger and out of the trigger guard (Figure 3) and keep the barrel of the gun pointed in a safe direction. Place the hammer into either the safety/carry condition or the half cock condition.
(See pages 15 & 16)

FIGURE 3

FIGURE 3a

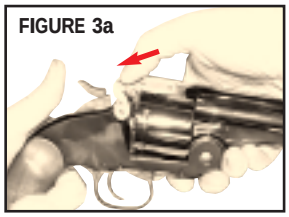

FIGURE 4

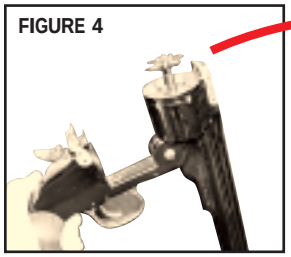

FIGURE 4a

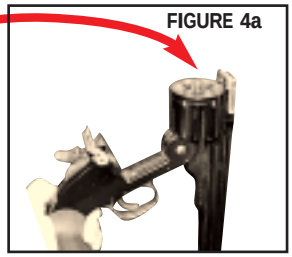

Push back the barrel latch and rotate the barrel downward. With the barrel pointed in a safe direction, continue to open the frame and barrel until the extractor completes its cycle and snaps back into the cylinder. (Figures 4 & 4a)

Check all charge holes (chambers) to ensure they are unloaded and the barrel is free of obstructions.

You must follow this procedure every time your revolver is handled, inspected, handed to another person, transported or stored.

!! WARNING !!

Always inspect your revolver visually to be sure the hammer is in the safety/carry condition (cylinder stop up) before holstering or carrying it. Remember to keep your revolver pointed in a safe direction. Never leave a loaded firearm unattended. (See descriptions on pages 15 & 16 for Hammer Positions/Conditions)

INSPECTING YOUR SCHOFIELD CONT'D.

At Rest (Hammer Down) Position - (Figure 5)
This is the position where the hammer is fully forward. It will be in this position, for example, after firing. Do not attempt to open or close the revolver from this position. **YOU WILL DAMAGE YOUR REVOLVER ATTEMPTING TO OPEN OR CLOSE THE BARREL FROM THIS POSITION.**

FIGURE 5

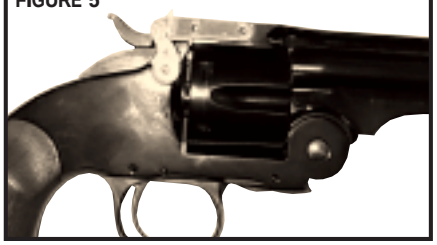

Half Cock Condition - Cylinder Stop Down - (Figure 6)
Place the hammer in this condition for all purposes except loaded carry. The cylinder rotates freely in this position.

FIGURE 6

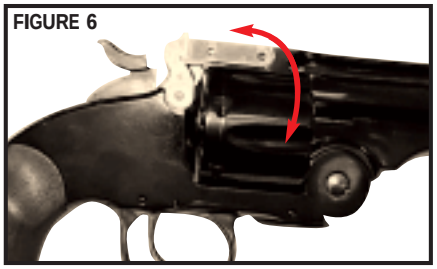

Safety/Carry Condition - Cylinder Stop Up - (Figure 7)
Place the hammer in this condition anytime the revolver is loaded. The cylinder is no longer free to rotate in this condition.

FIGURE 7

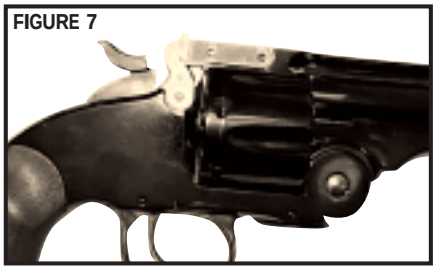

Fully Cocked - (Figure 8)
Place the hammer in this position immediately before firing each round.

YOU WILL DAMAGE YOUR REVOLVER ATTEMPTING TO CLOSE THE BARREL FROM THIS POSITION.

FIGURE 8

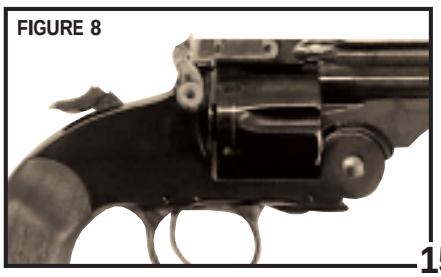

LOADING

- Do not load your revolver until you have read and understand ALL of the instructions in this manual.
- Do not load your revolver until you are at the shooting site and fully prepared to fire.
- To load your revolver, hold it in one hand with the barrel pointed in a safe direction and away from you and others while keeping your finger off the trigger and out of the trigger guard. Place the hammer into either the safety/carry condition (cylinder stop up) or the half cock condition (cylinder stop down).

!! WARNING !!

IT IS UNSAFE TO REST THE HAMMER ON THE FIRING PIN WITH A LIVE CARTRIDGE IN THE CHAMBER. THE FOLLOWING INSTRUCTIONS MUST BE FOLLOWED TO AVOID UNINTENDED DISCHARGE OF THE FIREARM.

PLACING YOUR REVOLVER IN THE SAFETY/CARRY CONDITION

- With the barrel pointed in a safe direction and your finger out of the trigger guard, push back the frame mounted latch and rotate the barrel downward. Continue to open the frame and barrel until the extractor snaps back into the cylinder.
- Look at the cylinder stop. If it is up (in the safety/carry condition - protruding above the inner frame surface - Figure 9), go on to “Closing Your Revolver”. If the cylinder stop is down (half cock condition - not protruding above the inner frame surface - Figure 10), do the following:

FIGURE 9

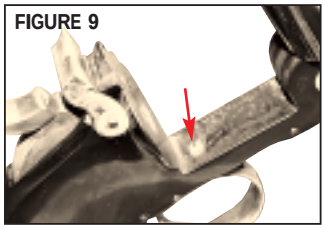

FIGURE 10

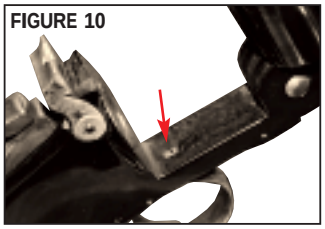

LOADING CONT'D.

- With your revolver still open and unloaded, draw the hammer rearward slightly. As you do this, pull the trigger and observe the cylinder stop move to the up position. (Figure 11)

- Remove your thumb from the hammer and then release the trigger. The cylinder stop should still be protruding from the inner frame surface and the hammer is positioned in the middle of its range of travel. The hammer is now in the **SAFETY/CARRY POSITION.** (Figure 12)

FIGURE 11

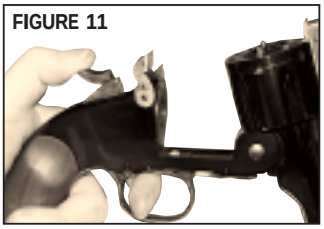

FIGURE 12

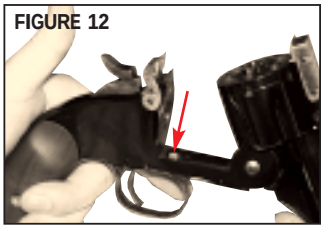

CLOSING YOUR REVOLVER

- Load five (5) .45 S&W (Schofield) cartridges into the charge holes (chambers). Leave the 6th charge hole empty for safety. (Figure 13)

- With the hammer still in the safety/carry condition (cylinder stop up), close the revolver with the empty charge hole aligned with the barrel opening. (Figure 14)

- Attempt to slightly rotate the cylinder in either direction to ensure the cylinder is properly locked and the empty charge hole is still in alignment with the barrel (Figure 15)

FIGURE 13

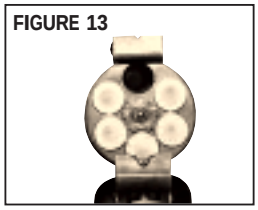

FIGURE 14

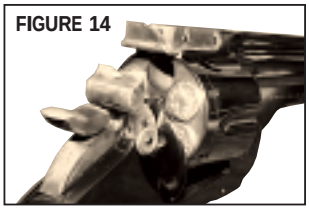

FIGURE 15

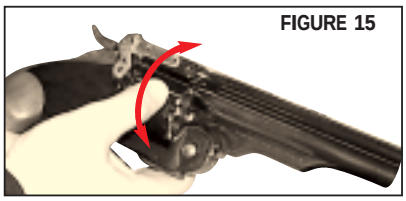

!! WARNING !!

Always inspect your revolver visually to be sure the hammer is in the safety/carry condition (cylinder stop up) before holstering or carrying it. Remember to keep your revolver pointed in a safe direction. Never leave a loaded firearm unattended. (See descriptions on pages 15 & 16 for Hammer Positions/Conditions)

FIRING

WARNING: During firing always keep the barrel pointed in a safe direction. Always keep your fingers away from the area between the cylinder and the barrel during firing.

Your Model 3 Schofield fires only in single action, in which the hammer must first be manually cocked and the trigger is pulled. (Figures 16 & 17). Single action trigger pressure is significantly less than the Double Action trigger pressure required by other types of revolvers. As with any handgun, exercise great care in handling the Schofield when it is loaded and fully cocked.

FIGURE 16

FIGURE 17

With your fingers outside of the trigger guard and a firm hold on the grips, place the thumb of your non-shooting hand on the hammer spur. Draw the hammer fully rearward until it is cocked as shown in (Figure 16). The revolver will now fire when the trigger is pulled.

Never touch the trigger until you are ready to fire. To fire, pull the trigger rearward. After firing, you must fully remove your finger from the trigger guard and manually fully cock the hammer to be ready to fire another round.Keep your finger off the trigger and outside the trigger guard until you are ready to fire again.

WARNING: Always keep the barrel pointed in a safe direction!

Decocking (or uncocking):

If you decide not to fire and your revolver is in the fully cocked position, you must follow these instructions to safely decock the revolver to the safety/carry condition.

- Remove your trigger finger from the trigger guard and place your trigger finger between the cocked hammer and the frame of the revolver. (Figure 18).
- Push back the frame mounted latch and rotate the barrel fully open. (Figure 19)

FIGURE 18

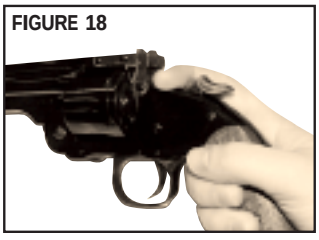

FIGURE 19

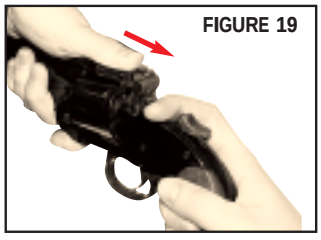

FIRING CONT'D.

- Remove all cartridges and empty casings from the firearm.
- Place your trigger finger on the trigger and place your thumb on the hammer. (Figure 20)
- Pull the trigger to the rear and hold it while lowering the hammer to the "at rest" position with your thumb. (Figure 21)
- Release the trigger.
- Draw the hammer back to the half cock condition (first click). (Figure 22)
- Notice the cylinder stop is in the down position. (Figure 23)
- With your revolver still open and unloaded, draw the hammer rearward slightly. As you do this, pull the trigger and observe the cylinder stop move to the up position.
- Remove your thumb from the hammer and then release the trigger. (Figure 24)
- The revolver is now decocked. The cylinder stop should still be protruding from the inner frame surface and the hammer is positioned in the middle of its range of travel. The hammer is now in the **SAFETY/CARRY POSITION**. (Figure 25)

FIGURE 20

FIGURE 21

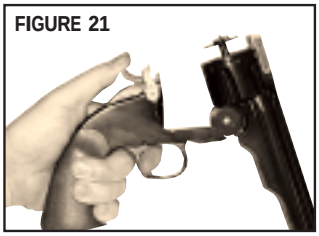

FIGURE 22

FIGURE 23

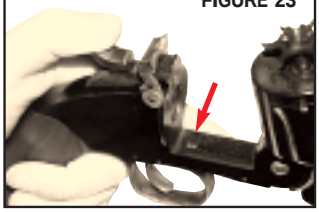

FIGURE 24

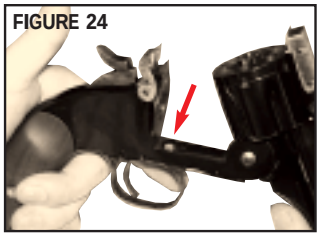

FIGURE 25

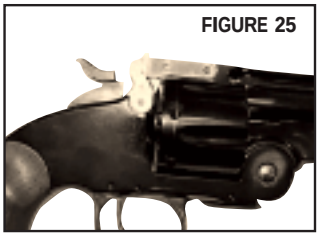

FIRING CONT'D.

Caution: Incomplete Decocking

Failure to hold the trigger fully rearward during the entire time the hammer is being lowered during decocking may result in the interruption of the forward movement of the hammer between the cocked position and the "at rest" position. In this case, the hammer will appear to have stopped between the full cock and "at rest" positions. If this occurs, keep the barrel open, keep your finger off the trigger and out of the trigger guard while returning the hammer with your thumb to the fully cocked position. Then properly decock the hammer to the "at rest" position following the decocking procedures outlined on pages 18-19.

CLEARING MISFIRES

If, during firing, a cartridge fails to fire, wait ten seconds while keeping the barrel pointed in a safe direction. Keep your finger off of the trigger and out of the trigger guard.

FIGURE 26

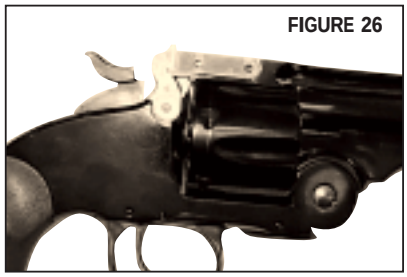

NEVER ATTEMPT TO OPEN OR CLOSE THE BARREL/FRAME WITH THE HAMMER IN THE "AT REST" POSITION. FAILURE TO FOLLOW THIS WARNING WILL CAUSE DAMAGE TO YOUR FIREARM.

Pull back the hammer back to the first click (safety carry or half cock condition - figure 26). Push back the frame-mounted latch and rotate the barrel downward. With the barrel pointed in a safe direction, continueto open the frame and barrel until the extractor snaps back into the cylinder. Remove the defective cartridge and dispose of it in a method specifically approved for live round disposal.

UNLOADING

- Always keep the barrel of your firearm pointed in a safe direction away from you and others.
- To remove either live cartridges or spent casings from the cylinder, first point the barrel in a safe direction. Place the hammer into half cock condition or the safety/carry condition.

NEVER ATTEMPT TO OPEN OR CLOSE THE BARREL/FRAME WITH THE HAMMER IN THE "AT REST" POSITION. FAILURE TO FOLLOW THIS WARNING WILL CAUSE DAMAGE TO YOUR FIREARM.

- With the barrel pointed in a safe direction and your finger out of the trigger guard, push back the frame mounted latch and rotate the barrel downward. Continue to open the frame and barrel until the extractor snaps back into the cylinder.
- Carefully count the cartridges and/or spent casings to be sure that you have recovered all of them.
- Make a visual check to be sure all charge holes (chambers) are empty. When unloading your revolver, always be sure to keep it pointed in a safe direction. Remember, a safe direction means that you are not pointing the barrel of your handgun at yourself or any other person.
- Safely secure and store ammunition separately from the firearm after unloading.
- Be sure to safely secure the firearm when you are done using it.

CLEANING AND MAINTENANCE

!! WARNING !!

Ensure your firearm is unloaded before beginning to clean it. At all times follow the basic rules of safe gun handling.

Your firearm is a precision instrument and to insure reliable function, it is necessary to follow a routine maintenance procedure. After firing your handgun, be sure to unload it following the procedure outlined in the section entitled "Unloading" on page 21 before performing any cleaning or maintenance procedure. Your handgun should be cleaned by brushing the barrel bore and chamber (charge holes) with a good powder-removing solvent and bore brush. Wipe the areas clean with patches or a swab. Using a small brush dipped in solvent, remove all deposits from around the breech of the barrel, chamber (charge holes), under the extractor and adjacent areas which have been subjected to the action of powder or primer residue. Remove any residue on the frame with light brushing and a solvent. After cleaning the entire gun, use a cloth to apply a light film of high quality gun oil to all external metal surfaces and wipe clean.

After the initial cleaning, there is usually some residue in both the barrel and cylinder that works out and becomes apparent within 24-48 hours. This can be removed with a bristle brush and a light re-application of powder removing solvent after which the oil film should be re-established on all surfaces.

Cleaning is considered essential in order to ensure the proper functioning of your handgun.

For additional maintenance, we recommend the services of a qualified gunsmith. Please refer to section entitled "Service". If your firearm will be used or stored in a cold climate, be sure to use an oil that will not thicken at low temperatures.

SERVICE, SHIPPING & PARTS

For Owners Within The United States

SERVICE

Customer Service
2100 Roosevelt Avenue
Springfield, MA 01104
Tel: 800-331-0852 • 413-781-8300
E-mail: qa@smith-wesson.com

Should your Smith & Wesson firearm require service, it should be returned to Smith & Wesson in its original case or in a similarly secure container. It is not necessary to take the gun to a dealer for shipment. However, before shipping your firearm, call or e-mail our Customer Service Dept. for authorization and shipping instructions.

Before shipping your handgun, ensure that the firearm is unloaded, package it securely, and do **NOT** ship any ammunition. The package must **NOT** bear any markings which indicate the identity of the contents. Enclose a letter which includes your full name and address (no P.O. Boxes, please), daytime telephone number, e-mail address, the serial number of the firearm, and details of the problem experienced or work desired. Record the serial number before shipping, in case you wish to check on the repair status of your firearm.

Ship Centerfire pistols and ALL revolvers to:
Customer Service, 2100 Roosevelt Avenue, Springfield, MA 01104

Ship ALL .22 caliber pistols to:
Customer Service, 19 Aviation Drive, Houlton, ME 04730

Please call the above telephone number or e-mail the above address before shipping!!

Since we cannot assume responsibility for custom parts and accessories, such as stocks, special sights, or holsters, please remove these items before returning your firearm.

Warranty repair work will begin upon receipt and examination of the firearm. In the case of repairs or work not covered by the warranty, a quotation covering the cost of the work plus round trip transportation charges will be sent to you. Repairs or modification will begin upon receipt of payment.

SERVICE, SHIPPING, & PARTS CONT'D.

SHIPPING

When shipping a firearm, it is most important that you comply with federal, state, and local laws and regulations. The following guidelines are meant to help, but you must seek assistance from the appropriate authorities if necessary.

- Check magazines and chambers to ensure that they are unloaded. Do not ship ammunition.
- Do not attempt to *MAIL* a handgun; only federally licensed dealers may mail a firearm.
- If your firearm must be replaced, it may be necessary to ship the replacement to a dealer rather than directly to you. You will be requested to furnish a signed FFL (Federal Firearms License) from your dealer in such an instance.
- When returning a pistol, please include all magazines ensuring they are unloaded; they are important to the proper function of the handgun.

ACCESSORIES & PARTS

Replacement parts and accessories for your Smith & Wesson firearm are available from your local Smith & Wesson Stocking Dealer, or directly from the Smith & Wesson Parts Department.

When ordering parts directly from the factory, please provide the following information:

- Model Number
- Dash Number
- Serial Number
- Approximate date of purchase
- Part view Number (refer to diagram)
- Complete Return Address
- VISA/Discover/MasterCard Number and Expiration Date
- For Foreign Orders Only, Fax Number or E-mail Address

WARRANTY

For Owners Within The United States

This warranty is granted by Smith & Wesson, 2100 Roosevelt Avenue, P.O. Box 2208, Springfield, MA 01102-2208. This warranty is effective from the date of purchase after February 1, 1989 and applies to the original owner of any handgun purchased after that date. With respect to such handguns, this warranty supersedes any and all other warranties.

Smith & Wesson handguns are warrantied to be free from defects in material and workmanship. Any such defects of which Smith & Wesson receives written notice within one year from the date of purchase by the original owner, will be remedied by Smith & Wesson without charge within a reasonable time after such notification and delivery of the handgun as provided below. If any unsafe and/or illegal condition if found during warranty inspection, Smith & Wesson will return the handgun to its original specification.

Warranty claims (in writing) and the handgun concerned should be delivered to Smith & Wesson's Customer Service Department at the above address. In addition, a copy of the bill of sale in the owner's name, or a copy of ATF Form 4473 indicating date of purchase must be included.

Warranty claims should state the model and serial number of the handgun concerned and the description of the difficulty experienced. It is recommended that shipments be insured by the owner, since Smith & Wesson will accept no responsibility for loss or damage in transit. Transportation and insurance charges for return to owner will be paid by Smith & Wesson if the claim is covered by the warranty.

UNDER NO CIRCUMSTANCES SHALL SMITH & WESSON BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES WITH RESPECT TO ECONOMIC LOSS, INJURY OR PROPERTY DAMAGE, WHETHER AS A RESULT OF BREACH OF EXPRESS OR IMPLIED WARRANTY, NEGLIGENCE OR OTHERWISE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you in whole or in part.

Smith & Wesson will not be responsible for defects resulting from careless handling, unauthorized adjustments or modifications, defective or improper ammunition, corrosion, neglect, abuse, ordinary wear and tear, or unreasonable use.

Smith & Wesson reserves the right to determine what constitutes ordinary wear and tear. However, we can rebuild handguns that have experienced extreme usage or are beyond their normal useful life at a fee that will be quoted to the owner.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

EXTENDED SERVICE POLICY

For Owners Within The United States

Even after the warranty period has expired, Smith & Wesson will repair, without charge, any handgun purchased by the original owner on or after February 1, 1989 that is found to have defect in material or workmanship. Eligibility for this extended service policy requires returning the Product Registration Card within thirty days of purchase. A copy of the bill of sale in the owner's name and the sales receipt should accompany the handgun.

If any unsafe and/or illegal condition is found during warranty inspection, Smith & Wesson will return the handgun to its original specification.

This policy covers functional defects; it does not include the handgun's finish, grips, magazines or sights.

This policy is in addition to and not an extension of the Smith & Wesson Warranty.

Lifetime Service Policy

Fast Reliable Service

If you have any questions or concerns regarding your Smith & Wesson product, please give us a call. Our customer service representatives are product knowledgeable and are here to help you.

911 Priority Repair Service

In the event of an emergency (repairs needed by law enforcement, an upcoming match or hunting trip), call 1-800-331-0852 and ask for 911 Priority Repair Service. This allows you to speak with a Smith & Wesson representative. Immediately upon receipt, your handgun will be assigned to a gunsmith. After the work is completed, we will return your Smith & Wesson handgun via overnight delivery.

This handgun is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a secure place and take other steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventative steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths.

Smith & Wesson
2100 Roosevelt Avenue • Springfield, MA 01104
www.smith-wesson.com

REV:SCH040101